



DEFENDER50 Installation

Description:


Below is a basic guide to installing the Melba Swintex DEFENDER50 system with DoubleTops.

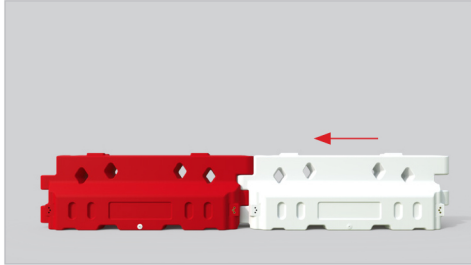


1] Put each barrier out in their desired position, and line up with each corresponding end.

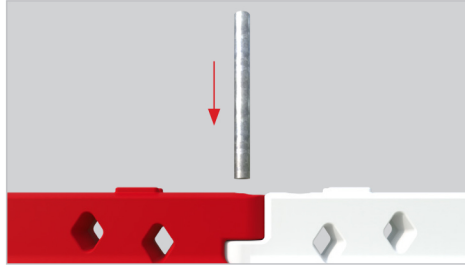


2] Insert the steel tube downwards to lock the barriers together.

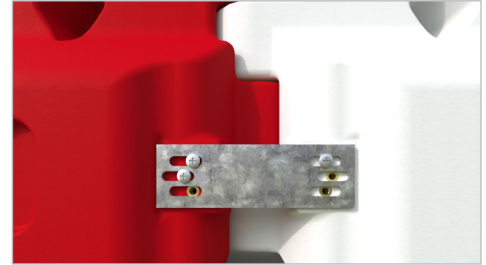


3] Take the a fixing plate & 6 x HEX8 bolts and fit into position on both sides of the barriers.

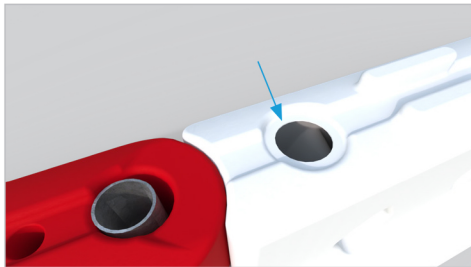

4] Remove the cap from the top and begin to fill with water. Not where the steel tube goes.

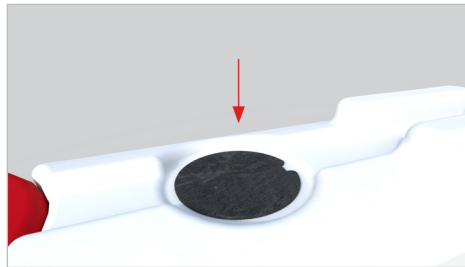


5] Once over 400 litres has been installed, push the Cap back down to seal the hole.

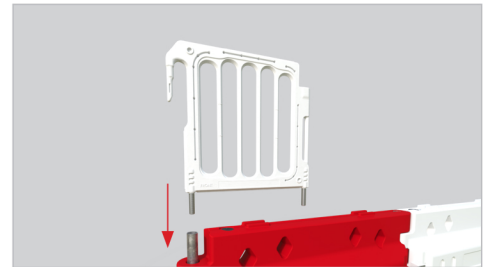

6] Starting from the far left, install each fencing top into the holes found on the top of the barrier.



7] Continue to the right until all top fencing is installed.

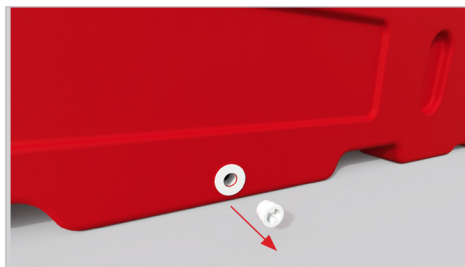

8] When ready to disassemble the system. Remove the bung at the bottom using a flat large tool and allow to drain.

In order to disassemble: Repeat all steps but in the reverse order.

